

eye-D/C1

DOCUMENT VERIFICATION SYSTEM

foster+freeman



An easy-to-use frontline examination system for checking passports and other security documents at...

- ***Immigration and border control***
- ***Banks***
- ***Police departments***
- ***Social security & benefits offices***
- ***Vehicle licensing departments***



eye-D/C1

A frontline examination system to combat the threat of counterfeit documents

The **eye-D/C1** is a cost effective system for the visual examination of security documents providing the facilities for verifying the presence of security features as well as detecting alterations or tampering. Featuring six light sources, a magnifier and transparent screens with safety interlocks to prevent UV exposure the **eye-D/C1** is a versatile system and can be operated using standard AC mains power or a 12V DC source such as a vehicle cigarette lighter. With a compact, lightweight design and a padded carrying case that unfolds to provide light shielding in bright ambient conditions, the **eye-D/C1** is easily deployed for use in the field.

The eye-D/C1 examination system

Product Code: eye-D/C1

EXAMINATION FACILITIES

- **White Incident Light**
2 x 9W fluorescent lamps for the general examination of documents for irregularities such as photo substitution and print quality.
- **White Transmitted Light**
2 x 9W fluorescent lamps for the examination of water marks and security threads and the detection of mechanical erasures.
- **White Oblique Light & White Coaxial Light**
1 x 20W halogen lamp with reflector and adjustable intensity for the examination of embossed stamps and retro-reflective features.
- **UV (longwave) Incident Light**
2 x 8W blacklight fluorescent lamps for the examination of paper quality, fluorescent fibres and printed features and the detection of chemical erasures.
- **UV (shortwave) Incident Light**
UVC incident light source (254nm),
1 x 6W lamp (safety interlocked).
- **UV (longwave) Incident Light**
UVB incident light source (313nm),
1 x 6W lamp (safety interlocked).
- **x2 Integral Magnifying Lens**
100 x 60mm optical glass, 4 dioptries.

OTHER FEATURES

- Safety interlocked clear viewing screens block shortwave and mediumwave UV.
- 360 x 220mm examination area, 20° tilted.
- AC mains power input, 100-240V.
- DC 12V power input (vehicle cigarette lighter plug and lead supplied).
- Ergonomic user friendly design with folding carry handle and non-slip feet.
- Padded nylon carry case with padded shoulder strap and pouch for cables.
- Carry case folds to provide light shielding.
- Dimensions excluding carry case; 320 (height) x 370 (width) x 260 (depth)mm.

OPTIONAL EXTRAS

UV (longwave) Transmitted Light
12 x 12mW LEDs for the examination of fluorescent fibres and printed features.

White Transmitted Spot Light
1 x 20W halogen lamp with reflector for the examination of obliterations and photo substitutions.

x10 External Magnifier
Hand held loupe, stored in clip holder for the examination of micro-printing.

Portable Battery and Charger
Comprising: Battery Adaptor, 7.5 A fuse, Lead & Plug, Padded Bag, Battery Type: BH1233, Charger Type: DC18RA, 230V input (if 110V is required please specify).
Run Time: 90 minutes minimum.

Product Code

Code: eye-D/TRANS UV


Code: eye-D/TRANS SW

Code: eye-D/MX10

Code: eye-D/BAT



Watermarks and security threads viewed with white transmitted light (above) and fluorescent security features viewed under incident UV light (right).

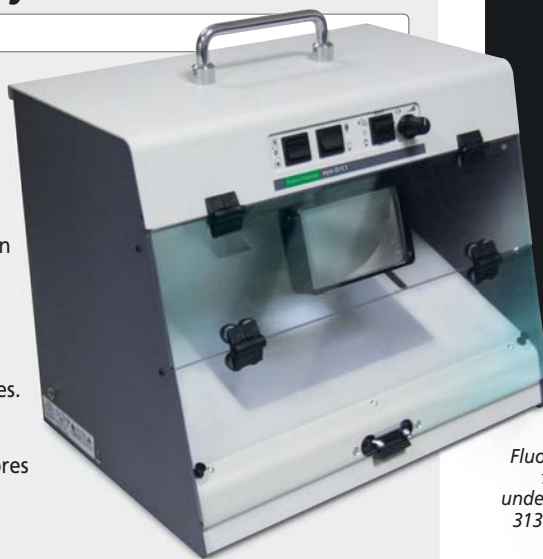

Fluorescent security features viewed under UV lighting at 313nm (above) and 254nm (right).



Appointed Agent:

foster+freeman

www.fosterfreeman.com

Head Office & UK Sales Office: ☎ +44 (0) 1386 768050
Foster & Freeman Ltd. ☎ +44 (0) 1386 765351
Vale Park, Evesham, 🌐 www.fosterfreeman.com
Worcestershire, WR11 1TD. UK 📧 sales@fosterfreeman.com

USA Sales Office: For enquiries from the USA and Canada
☎ 888 445 5048 🌐 www.fosterfreeman.com
☎ 888 445 5049 📧 usoffice@fosterfreeman.com